



FRONT FORK STAND

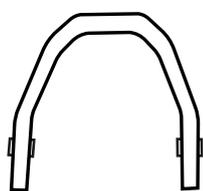

U-BOLT
HANDLE
(x1)



SIDE
PART
(x2)

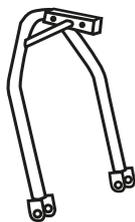

LIFTING
FRAME
(x1)



LIFTING
ARM
(x1)



SPECIFIC
BOLT
(x5)



BOLT
(x2)



SECURE
CLAMP
(x2)



PLASTIC
SLEEVE
(x4)



SECURE
PIN
(x1)



SCREW
(x4)



SCREW
(x2)




WASHER
(x2)



SELF
LOCKING
NUT
(x2)

ASSEMBLY

1. CONNECT THE SIDE PARTS TO THE U-BOLT AND SECURE THEM (2.) WITH THE FOUR SCREWS.
3. CONNECT THE SIDE PARTS WITH THE LIFTING FRAME USING THE BOLT WITH THE PLASTIC SLEEVE AND THE SECURE CLAMP
4. CONNECT THE LIFTING ARM WITH THE FRAME WITH THE TWO SCREWS AND THE WASHERS AND SELF-LOCKING NUTS
5. INSTALL THE SPECIFIC BOLT FOR YOUR MOTORBIKE (13 / 15 / 16.5 / 17 / 18 MM) AND SECURE IT WITH THE PIN.

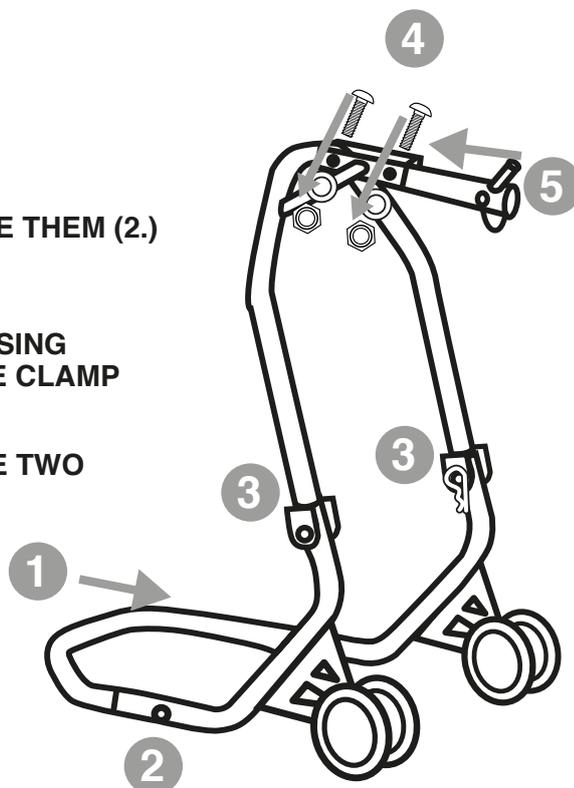

ATTENTION: ALWAYS USE THIS STAND IN CONJUNCTION WITH A REAR STAND.

MAX. SUPPORTER WEIGHT: 150KG.

CHECK THE CORRECT FUNCTION BEFORE EACH USE. RETIGHTEN THE SCREWS IF NECESSARY.