

HUSHER


OFFROAD STAND

REQUIRED TOOLS (NOT INCLUDED):


5MM ALLEN KEY

ASSEMBLY

1. ASSEMBLE THE SUPPORT LEGS (LOWER PART) WITH THE SIDE BARS, USING THE M6X16 BOLTS AND M6 WASHERS..

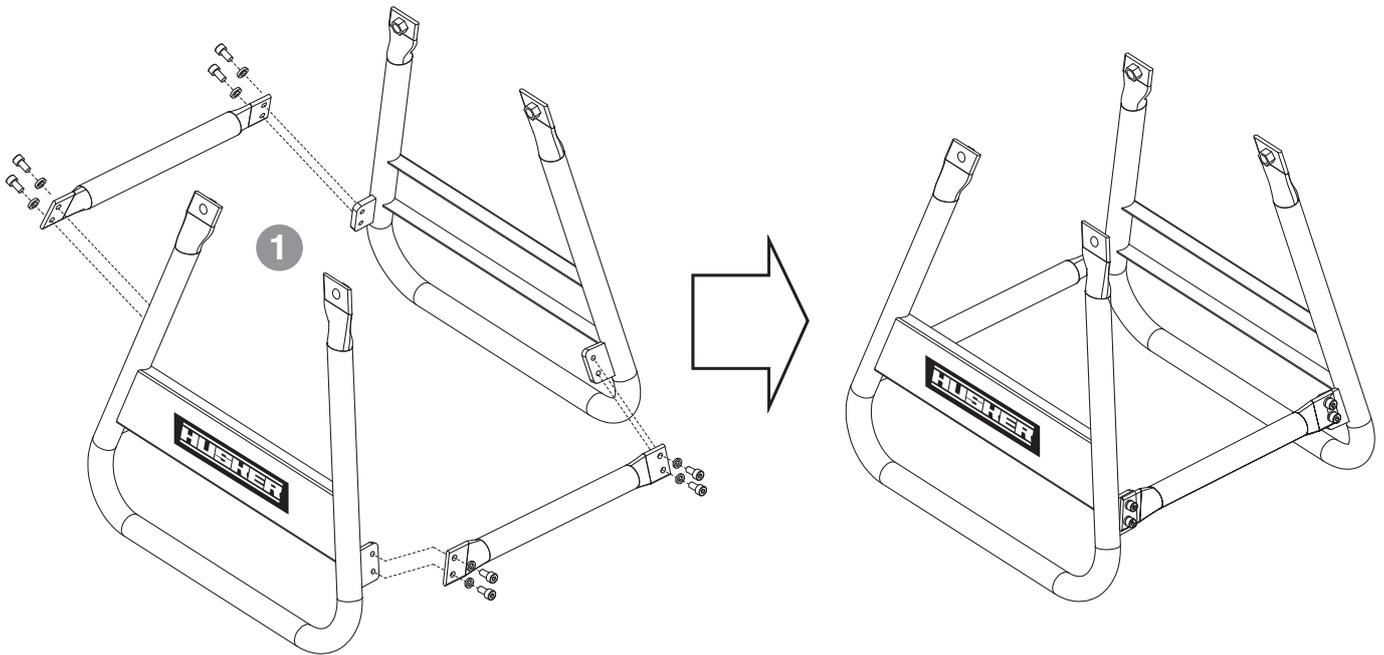

2. JOIN THE LOWER PART AND THE UPPER PART WITH THE M8X16 BOLTS AND M8 WASHERS.

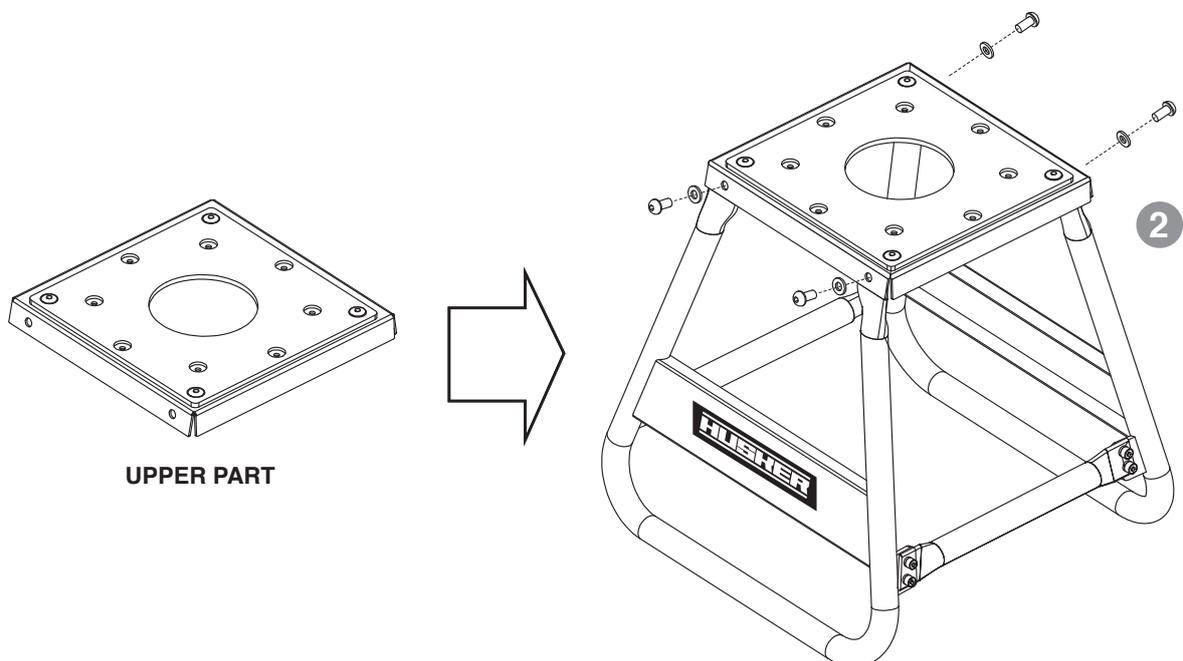

NOTES AND WARNINGS

THE PRODUCT MUST BE ASSEMBLED AND USED IN ACCORDANCE WITH THE PROVISIONS OF THE MANUAL.

AVOID LONG-TERM EXPOSURE TO HUMID ENVIRONMENTS TO PREVENT MILDEW.

KEEP THE PRODUCT AWAY FROM FIRE SOURCES AND HIGH TEMPERATURES. DO NOT EXPOSE THE PRODUCT TO DIRECT SUNLIGHT.

DO NOT PLACE ANY HOT OBJECTS DIRECTLY ON THE SURFACE OF THE PRODUCT.

IF THERE ARE ANY DEFECTIVE OR MISSING PARTS AFTER UNPACKING, PLEASE CEASE ASSEMBLY IMMEDIATELY AND CONTACT US.

PLEASE ASSEMBLE THE ITEM ON A SPACIOUS SURFACE; TO AVIOD PRODUCT DAMAGE, DO NOT PLACE THE UNWRAPPED PRODUCT DIRECTLY ON THE GROUND.

PLEASE DO NOT STAND OR SIT ON THE WOODEN BOARDS.

PLEASE KEEP THE PRODUCT AWAY FROM SHARP, POINTED OBJECTS AND CORROSIVE SUBSTANCES TO PREVENT PRODUCT DAMAGE.

IF YOU FIND THAT THE TABLE LEGS ARE LOOSE DURING USE, PLEASE TIGHTEN THE SCREWS AS SOON AS POSSIBLE TO PREVENT THE ISSUE FROM PERSISTING.

**ATTENTION: 250KG MAX. WEIGHT OF THE MOTORBIKE
CHECK THE CORRECT FUNCTION BEFORE EACH USE. RETIGHTEN THE SCREWS IF NECESSARY.**



SCAN QR
FOR OTHER
LANGUAGES