


OFFROAD STAND

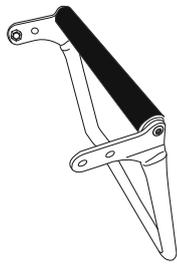

REAR
HANDLE
(x1)



FRONT
HANDLE
(x1)



SUPPORT
ARM
(x2)



KNOBS
(x1)




PINS
FOR CLIPS
(x2)



SAFETY
CLIPS
(x2)

ASSEMBLY

1. POSITION THE SIDES OF THE STAND IN VERTICAL AND INSERT THE WINGNUT, JUST WITH 3 TURNS (LEAVING IT LOOSE).
2. INSERT THE 2 BOLTS WITH THE WASHERS AND NUTS. TIGHT THEM COMPLETELY.
3. TIGHT THE WINGNUT TOTALLY.
4. FOR FOLDING THE STAND, REMOVE THE WINGNUT.

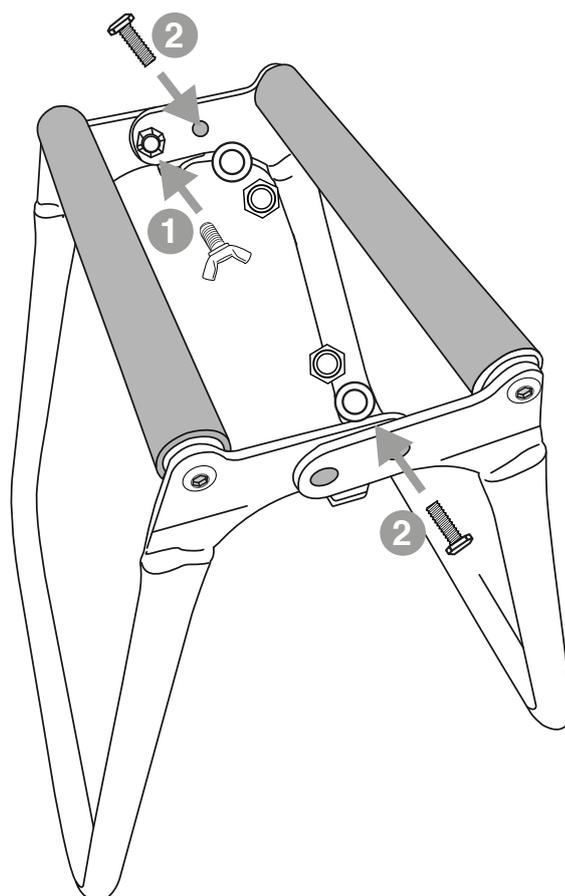

MAX. SUPPORTER WEIGHT: 150KG.