
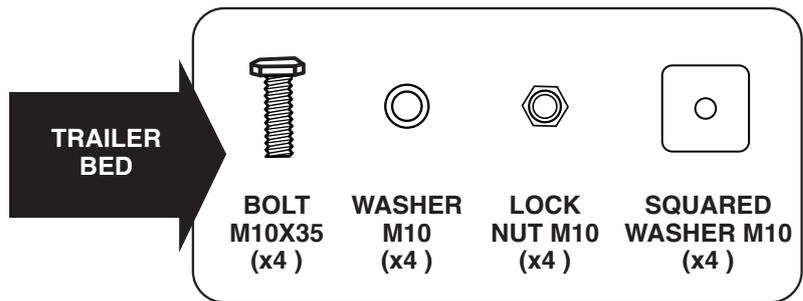
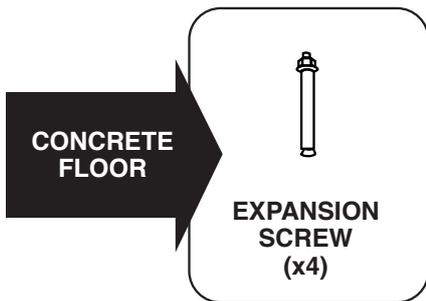




HUSHER

WHEEL CHOCK

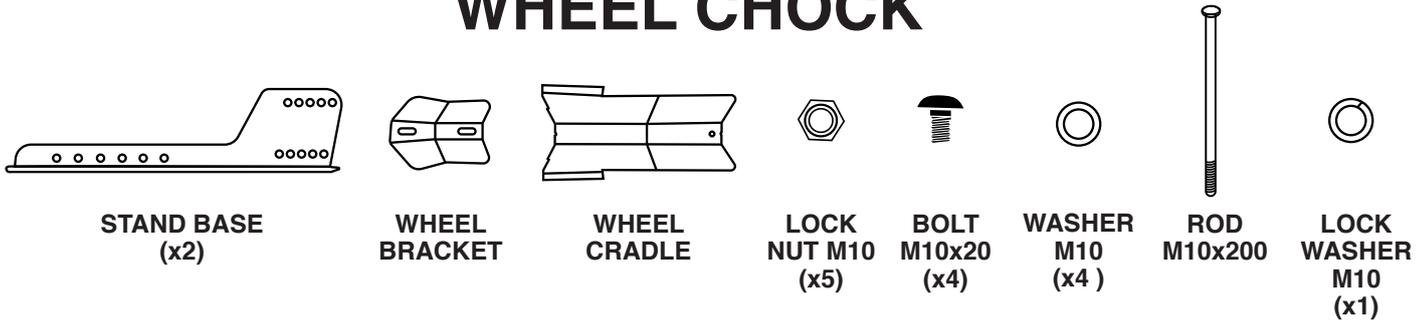


ASSEMBLY

1. ASSEMBLE WHEEL CRADLE WITH THE STAND BASES USING THE BOLTS, WASHERS AND LOCK NUTS. THERE ARE SEVERAL EYELETS TO ADJUST TO WHEEL SIZE.
2. ASSEMBLE WHEEL BRACKET WITH THE ROD, LOCK WASHER AND LOCK NUT. THERE ARE SEVERAL EYELETS TO ADJUST THE WHEEL SIZE (12" TO 21").

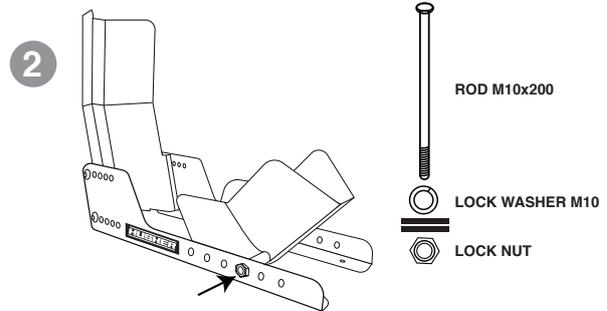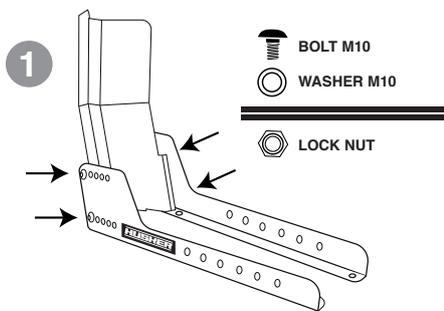

WHEEL SIZE ADJUSTMENT

THE WHEEL CRADLE CAN BE MOVED FORWARD, OR BACKWARD DEPENDING ON THE SIZE OF THE MOTORCYCLE FRONT WHEEL. MEASURE THE MOTORCYCLE FRONT WHEEL AND SEE HOW IT FITS BETWEEN THE WHEEL BRACKET AND THE WHEEL CRADLE.

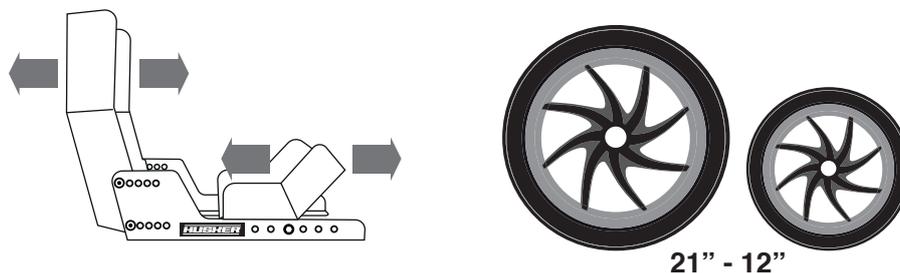


FLOOR MOUNTING

THIS WHEEL CHOCK MUST BE SECURELY MOUNTED BEFORE USING. PLAN THE LOCATION CAREFULLY. THE MOUNTING SURFACE MUST BE LEVEL AND SOLID AND DESIGNED TO SUPPORT THE HEAVY WEIGHT OF A MOTORCYCLE.


USE ON CONCRETE: DRILL BIT TO DRILL HOLES (3); THEN ATTACH CONCRETE EXPANSION SCREWS THROUGH THE HOLES OF THE STAND BASE. THEN SECURING THE STAND BASE TO THE CONCRETE (4).

TURNING WITH A WRENCH CLOCKWISE (5). THE BOLT WILL EXPAND, TAKING UP ALL THE AVAILABLE SPACE AND ANCHORING THE BASE TO THE GROUND (6).

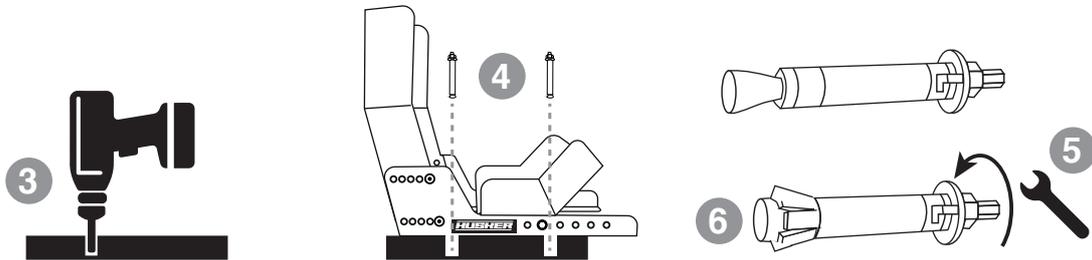


TRUCK/TRAILER BED

FOR MOUNTING TO A TRUCK BED, PLAN THE LOCATION ONLY AFTER MAKING SURE THAT NO ELECTRICAL WIRES, GAS TANKS OR OTHER OBSTACLES ARE IN THE PATH OF THE DRILLING. USE A STEEL CUTTING DRILL BIT TO DRILL THE NEEDED HOLES. SECURE THE STAND BASE TO THE TRUCK/TRAILER BED WITH THE M10 BOLTS, WASHER, SQUARED WASHERS AND LOCK NUT. THERE BOLTS ARE 35MM LENGTH, IF YOU NEED A LONGER SIZE YOU WILL NEED TO GET SPECIFIC BOLTS.

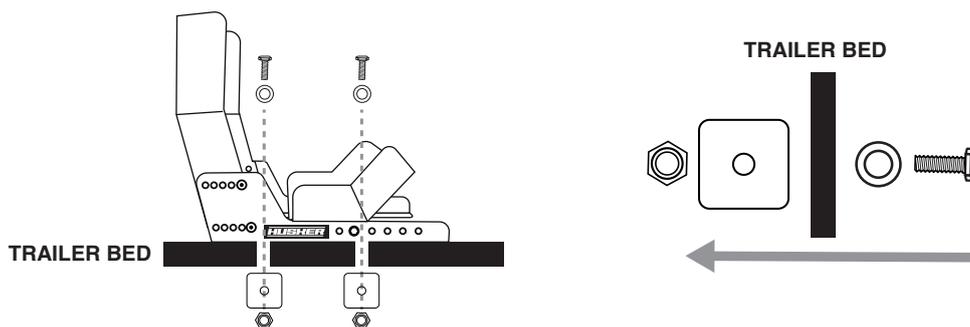

LOAD THE FRONT WHEEL

TO LOAD THE MOTORCYCLE INTO THE WHEEL CHOCK, LOWER THE LEADING EDGE OF THE WHEEL BRACKET (2) AND SLOWLY PUSH THE MOTORCYCLE INTO THE STAND. BE SURE THE ENGINE IS OFF WHEN DOING THE OPERATION. AS THE WHEEL ROLLS IN, THE PIVOTING BRACKET WILL PIVOT AND CLOSE, SECURING THE MOTORCYCLE IN THE WHEEL CHOCK. REMEMBER USE STRAPS OR BELTS TO SECURE THE MOTORBIKE

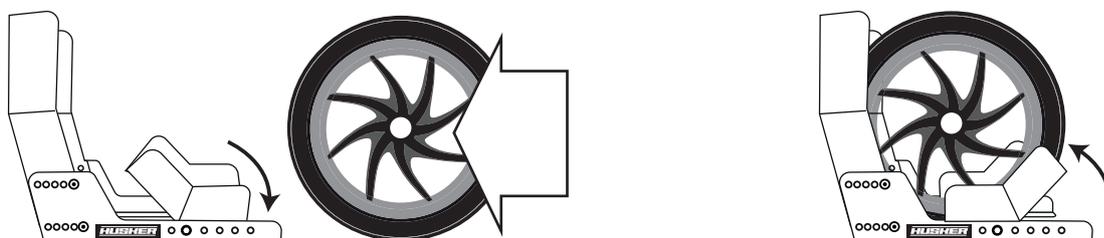

ATTENTION: 400KG MAX. WEIGHT OF THE MOTORBIKE

THE MOTORCYCLE MUST ALSO BE SECURED TO THE TRUCK BED WITH STRAPS (NOT INCLUDED)

CHECK THE CORRECT FUNCTION BEFORE EACH USE. RETIGHTEN THE SCREWS IF NECESSARY.



SCAN QR
FOR OTHER
LANGUAGES

HUSKER

B67236802 - c/Valencia, 511- 515 - 08013 Barcelona - SPAIN